WISE-52xx / WISE-224x System Restore Manual v1.0.5

During the operation of WISE-52xx and WISE-224x, if the system encounters any abnormal problem that you would like to reset the WISE-52xx and WISE-224x to factory default, please follow the steps below:


Please note: The process will clear all settings of WISE-52xx / WISE-224x.

1. Power off WISE-52xx/WISE-224x and remove the microSD card from WISE-52xx/WISE-224x, and insert the microSD card into the PC. If your PC does not provide the slot for microSD card, please remember to prepare a card reader and connect it to the PC for the microSD card.

2. Download the "WISE-52xx_224x Installer.zip" file from "http://wise.icpdas.com/Download.html", uncompress it and you will find the "WISE-52xx_224x Installer" directory. Copy the whole "WISE-52xx_224x Installer" directory from PC to the root directory of the microSD card.

3. Visit "http://wise.icpdas.com/Download.html" to download the latest version of WISE-52xx/WISE-224x firmware, then copy the firmware files you get to the "microSD\WISE-52xx_224x Installer\firmware" directory. After complete all setting, please remove the microSD card from PC and insert it into the WISE-52xx/WISE-224x.


4. Connect Mouse and monitor to WISE-52xx/WISE-224x, then power on WISE-52xx/WISE-224x. Use Mouse to double click the "My Device" icon on the desktop and "Micro_SD" icon, now you can find the "WISE-52xx_224x Installer" directory. Enter the directory and double click "WISE-52xx_224x Installer.exe" file to launch the process to reset the WISE-52xx/WISE-224x to factory default.

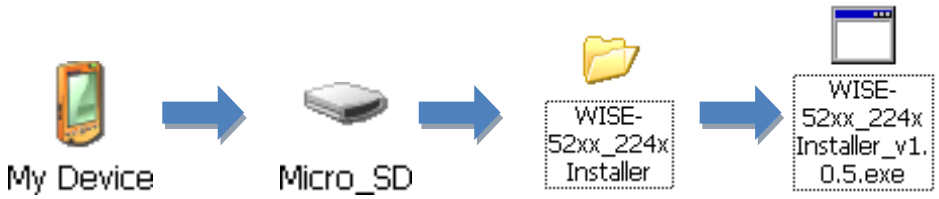


The process is described as below.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

- Select the correct firmware version which will be used in the installation.

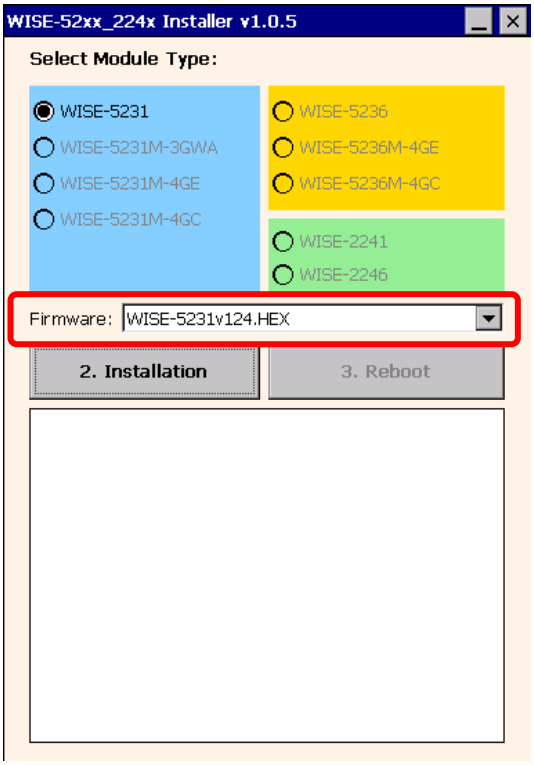


- Click the “2. Installation” button to start the process.

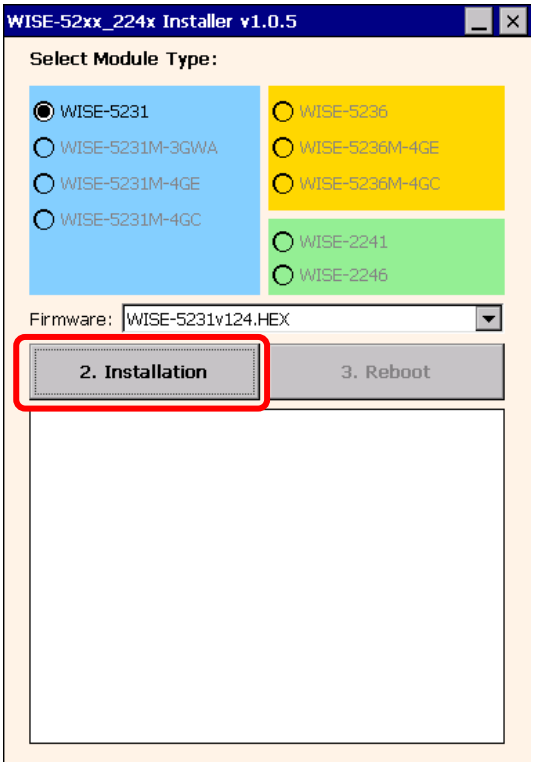

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

- When the process is finished, click the “3. Reboot” button to reboot WISE-52xx/WISE-224x controller.

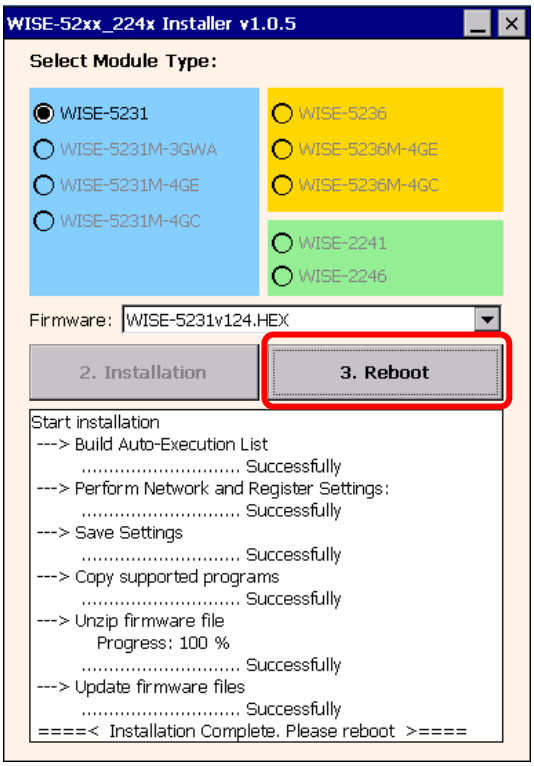

When the reboot process is finished, WISE-52xx/WISE-224x will return to factory default setting as below.

Item	Setting
IP Address	192.168.255.1
Subnet	255.255.0.0
Gateway	192.168.0.1
DNS	8.8.8.8
Default password for Administrator	Admin

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000