

tET-P(D)6/tPET-P(D)6
Quick Start

v1.2, Feb. 2018

What's in the box?

The package includes the following items:



tET/tPET-P(D)6 Module x 1



Quick Start x1 (This Document)

Related Information

- tET-P6/tPET-P6/tET-PD6/tPET-PD6 Series Product Page:

http://www.icpdas.com/root/product/solutions/remote_io/ethernet_io/petl-7000_tpet_tet/tet-p6.html

- Documentation & Firmware:

http://ftp.icpdas.com/pub/cd/tinymodules/napdos/tpet/

- NS-205/NS-205PSE/DP-665 Product Page (optional):

http://www.icpdas.com/root/product/solutions/industrial_ethernet_switch/ns-205.html

http://www.icpdas.com/root/product/solutions/industrial_ethernet_switch/ns-105pse.html

http://www.icpdas.com/root/product/solutions/accessories/power_supply/dp-665.html

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


1 Connecting the Power and Host PC


1) Make sure your PC has workable network settings.

Disable or well configure your Windows firewall and Anti-Virus firewall first, else the **"Search Servers"** on **Chapter 5** may not work. (Please contact with your system Administrator)

2) Connect both the tET/tPET-P(D)6 and your PC to the same sub network or the same Ethernet switch.

3) Supply power (PoE or +12~+48 VDC) **to the tET/tPET-P(D)6.**

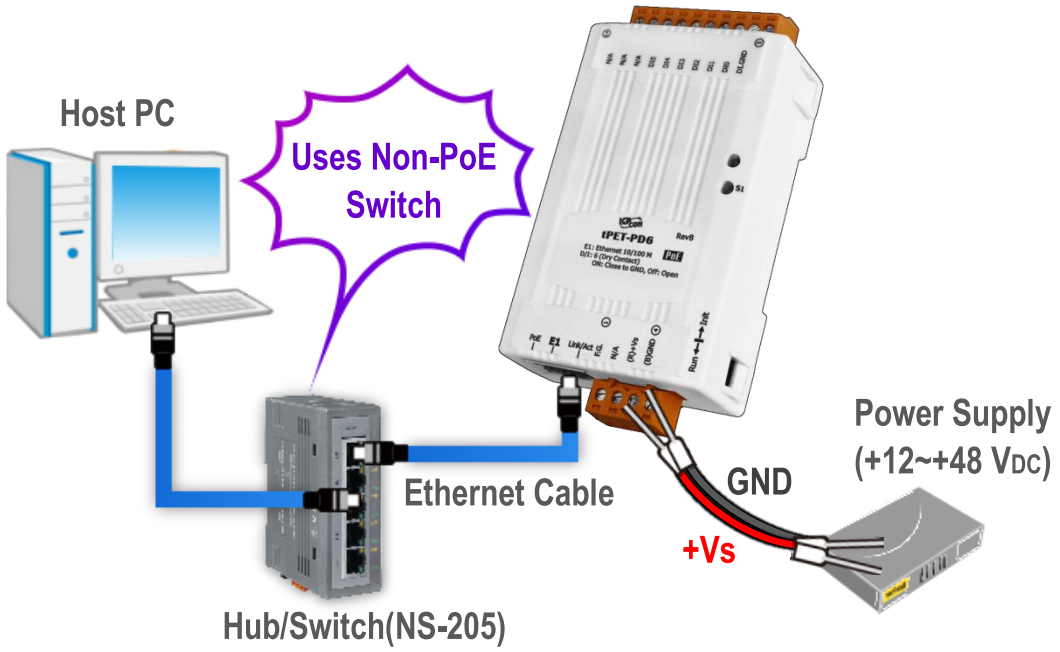

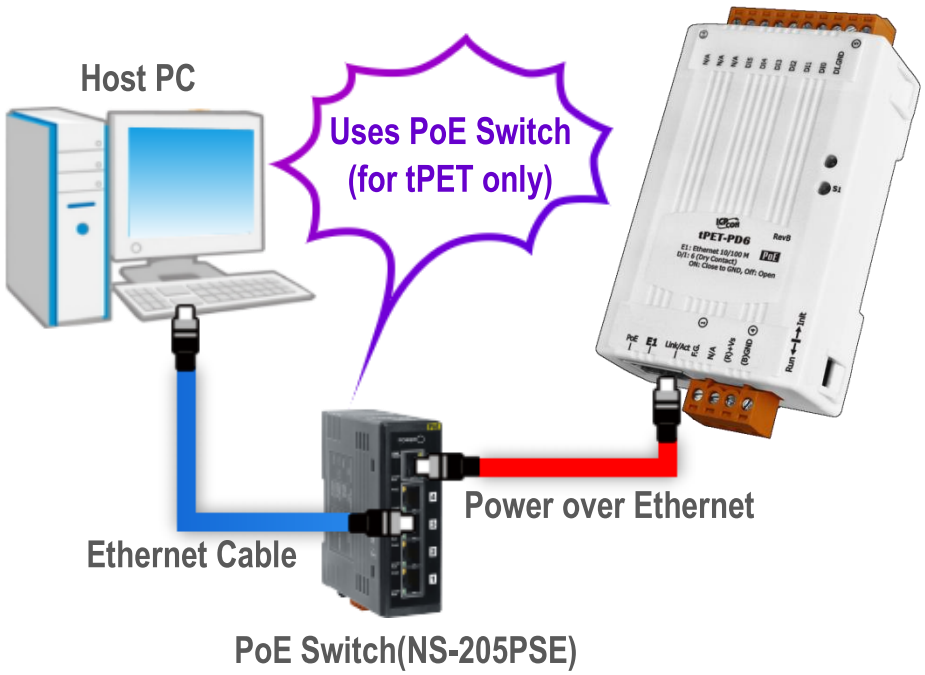


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2 Pin Assignments & Wiring Note





➢ Pin Assignments:

Terminal No.	Pin Assignment
E1	
01	F.G.
02	N/A
03	(R)+Vs
04	(B)GND


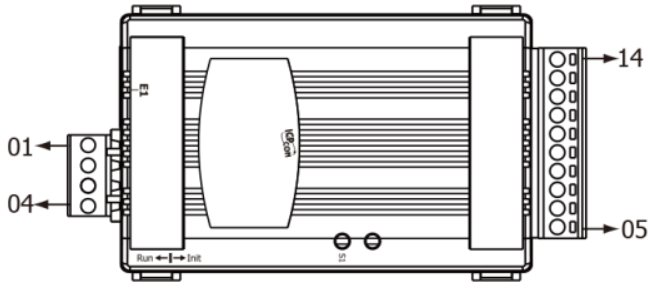


Terminal No.	Pin Assignment
14	N/A
13	N/A
12	N/A
11	DI5
10	DI4
09	DI3
08	DI2
07	DI1
06	DI0
05	DI.COM

➢ Digital Input Wiring of the **tET/tPET-P6**:

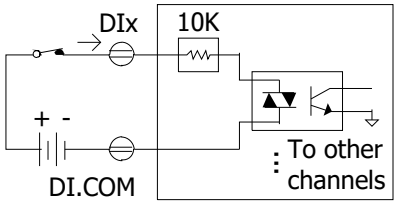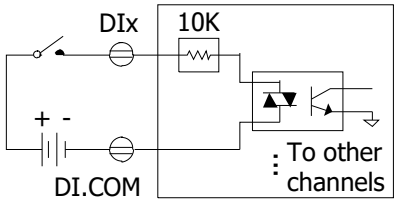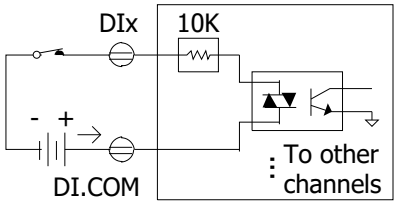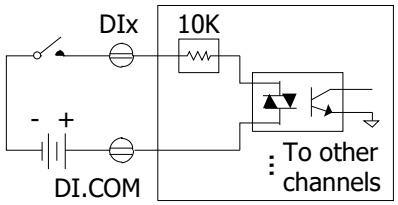Digital Input	Readback as 1	Readback as 0
Sink	+10 ~ +50 VDC	OPEN or <4 VDC
		
Source	+10 ~ +50 VDC	OPEN or <4 VDC
		


➢ Digital Input Wiring of the **tET/tPET-PD6**:

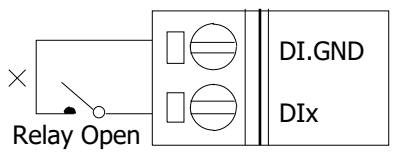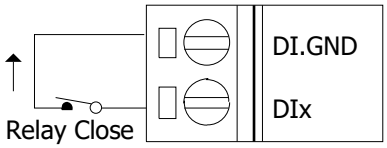Digital Input	Readback as 0	Readback as 1
Dry Contact	Relay Off	Relay On
		


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3 Wire the DI for Self-test

- **tET/tPET-P6**:
  1) Supply the **External Power +24V** to **DI0.** (External +10V connect to Pin06)
  2) Supply the **External Power GND** to **DI.COM.** (External GND connect to Pin05)

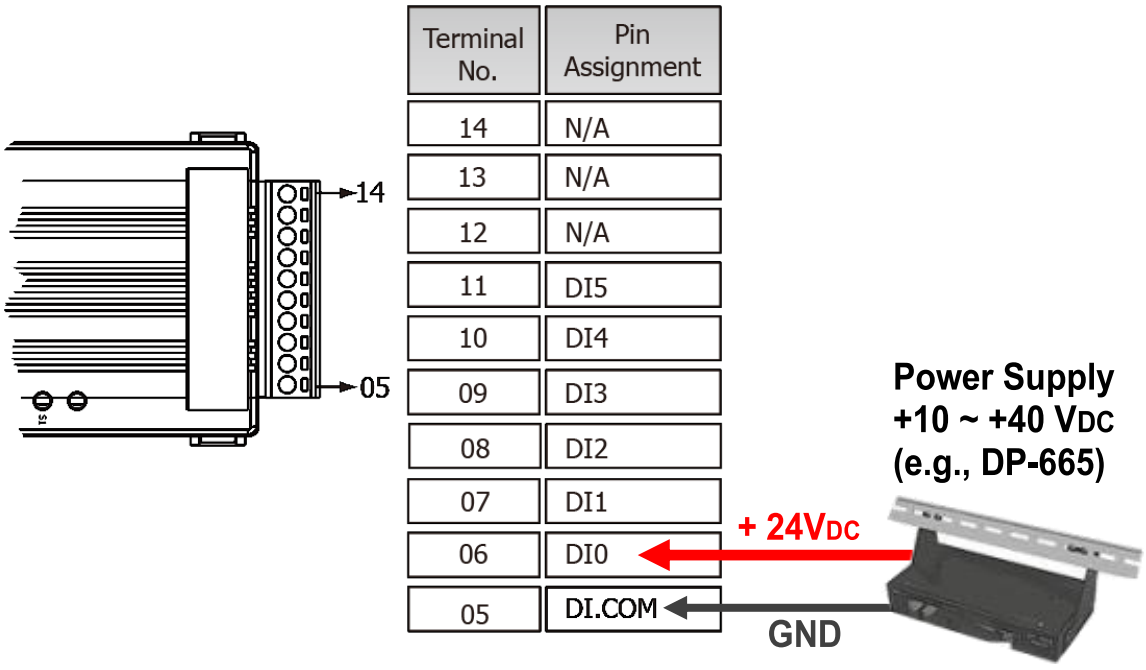

- **tET/tPET-PD6**:
  1) Connect the **DI0** and **DI.COM.** (Pin06 connect to Pin05)

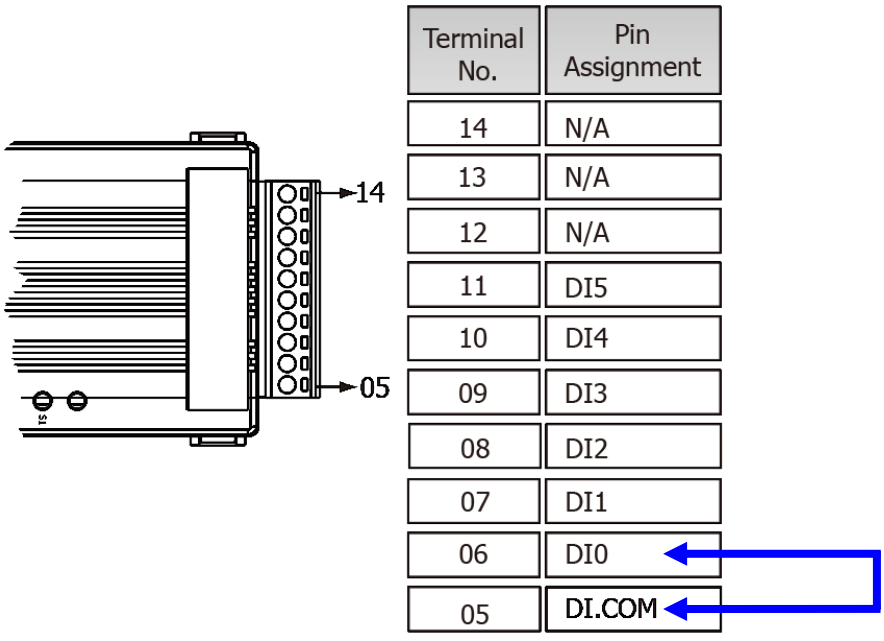

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4 Modbus Address

- **(1xxxx) DI address:**

Begin address	Points	Description	Bits Per Point	Range	Access Type
0 (0x0)	1~6	Digital Input	1	0:Off 1:On	R
32 (0x20)	1~6	Digital latched status (high)	1	0:no 1:latched	R
64 (0x40)	1~6	Digital latched status (low)	1	0:no 1:latched	R

- **(0xxxx) DO address:**

Begin address	Points	Description	Bits Per Point	Range	Access Type
32 (0x20)	1	Clear all DI latched status (high)	1	1: Clear	W
33 (0x21)	1	Clear all DI latched status (low)	1	1: Clear	W
150 (0x96)	1	Enable All DI latched status (high/low)	1	0:Disable 1:Enable	R/W/F
151 (0x97)	1~6	Enable high speed digital counter	1	0:Disable 1:Enable	R/W/F
. .	. .	. .	. .	. .	. .

Note

For detail “DI/DO Modbus Address” information, refer to Section 6.3 Modbus Register Table of user’s manual (http://ftp.icpdas.com/pub/cd/tinymodules/napdos/tpet/document/).

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

5 Configuring Network Settings




1) Run the eSearch Utility.

The eSearch Utility is located at:

http://ftp.icpdas.com/pub/cd/tinymodules/napdos/software/esearch/

2) Click the **"Search Servers"** to search your tET/tPET-P(D)6.


3) Double-click your tET/tPET-P(D)6 to configure the settings

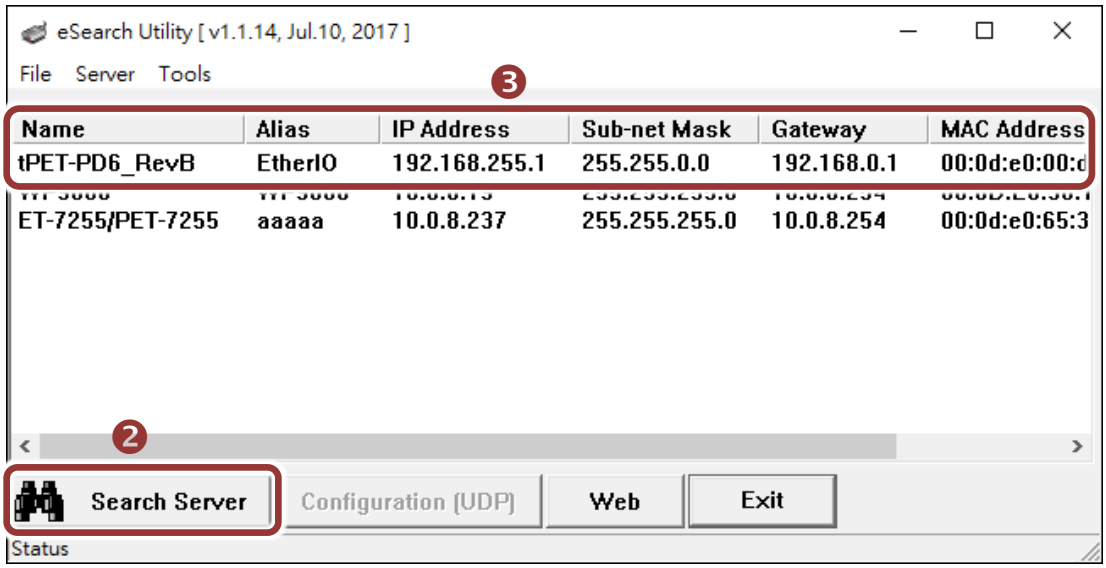

Factory Default Settings of tET/tPET-P(D)6:

IP Address	192.168.255.1
Subnet Mask	255.255.0.0
Gateway	192.168.0.1

4) Contact your Network Administrator to obtain a correct network configuration (such as **IP/Mask/Gateway**). **Enter the network settings** and click **"OK"**. **Note: The tET/tPET-P(D)6 will use the new settings 2 seconds later.**

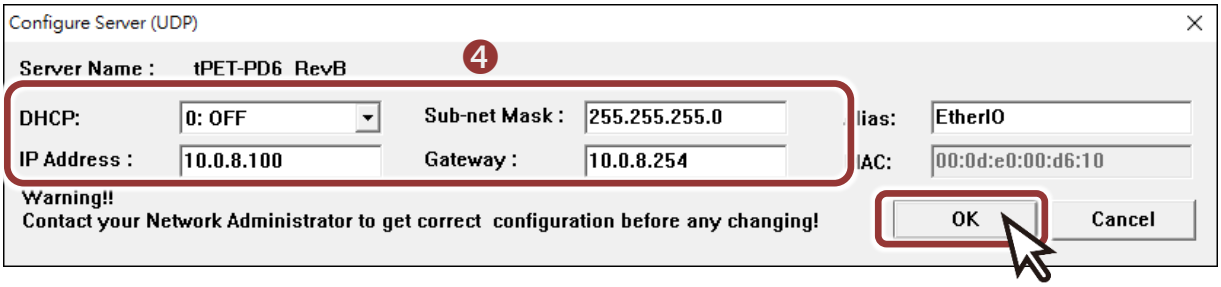


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

6 Testing your tET/tPET Module

1) Wait 2 seconds and click **"Search Servers"** button again to ensure the tET/tPET-P(D)6 is working well with new configuration.

2) Click the name of tET/tPET-P(D)6 to select it.

3) Click the **"Web"** button to log in to the web configuration pages. (Or enter the URL address of the tET/tPET-P(D)6 in the address bar of the browser.)

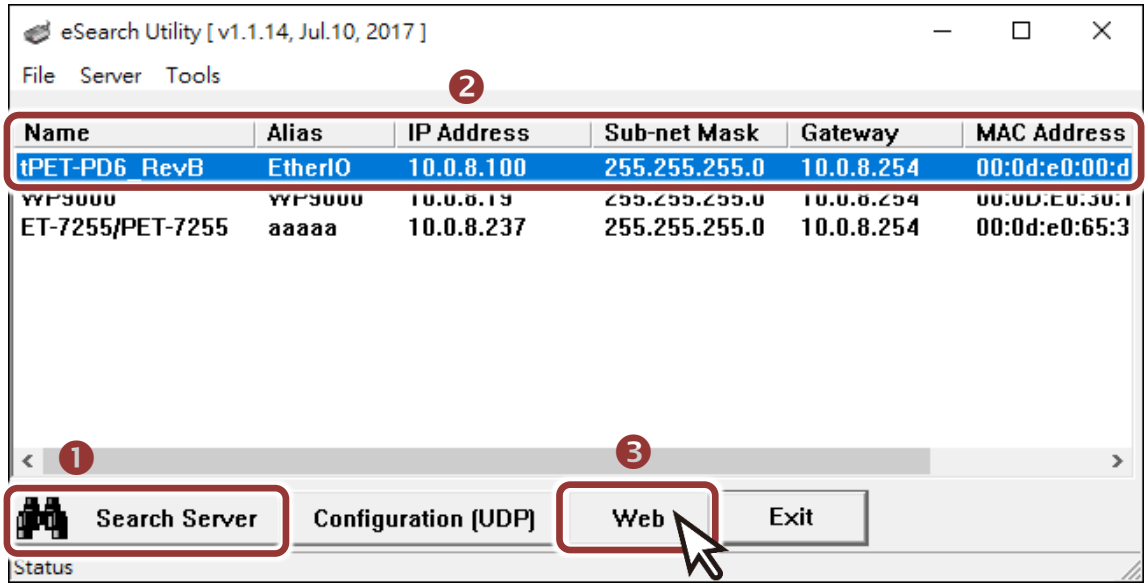

Note that if you intend to use Internet Explorer, ensure that the cache function is disabled in order to prevent browser access errors, please disable your Internet Explorer cache as follow: **(If you are not using IE browser, please skip this step.)**

Step1: Click **"Tools"** >> **"Internet Options…"** in the menu items.


Step 2: Click **"General"** tab and click the **"Settings…"** button in Temporary Internet files frame.

Step3: Click **"Every visit to the page"** and click the **"OK"** in Settings box and Internet Options box.


For more detail, refer to "FAQ: How to avoid a browser access error that causes a blank page to be displayed when using Internet Explorer"

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

4) **Enter the password** in the “login password” field and click **“Submit”**.

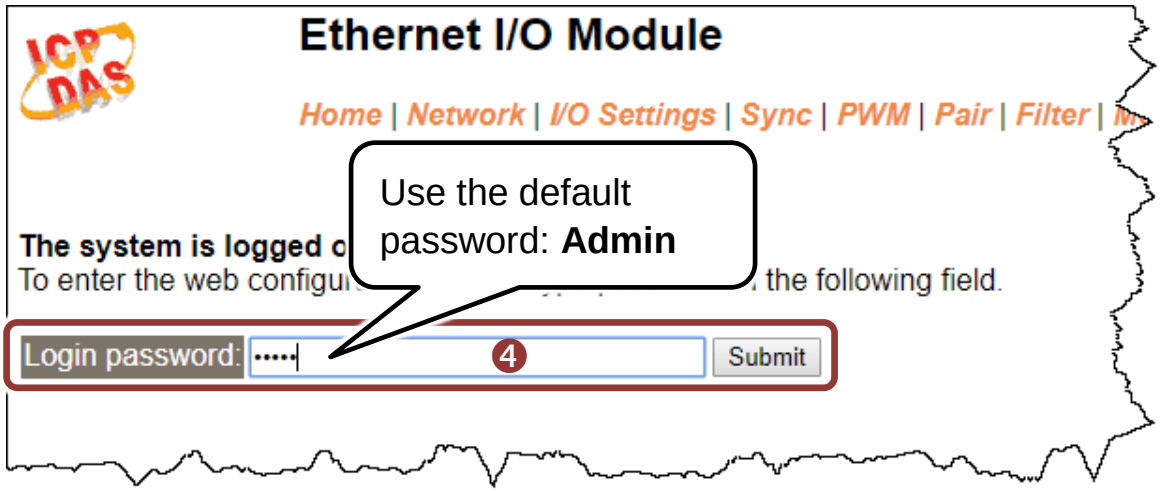

5) In the **“Home”** page, check that the **“DI0”** status should show current status is **ON (Green)**.

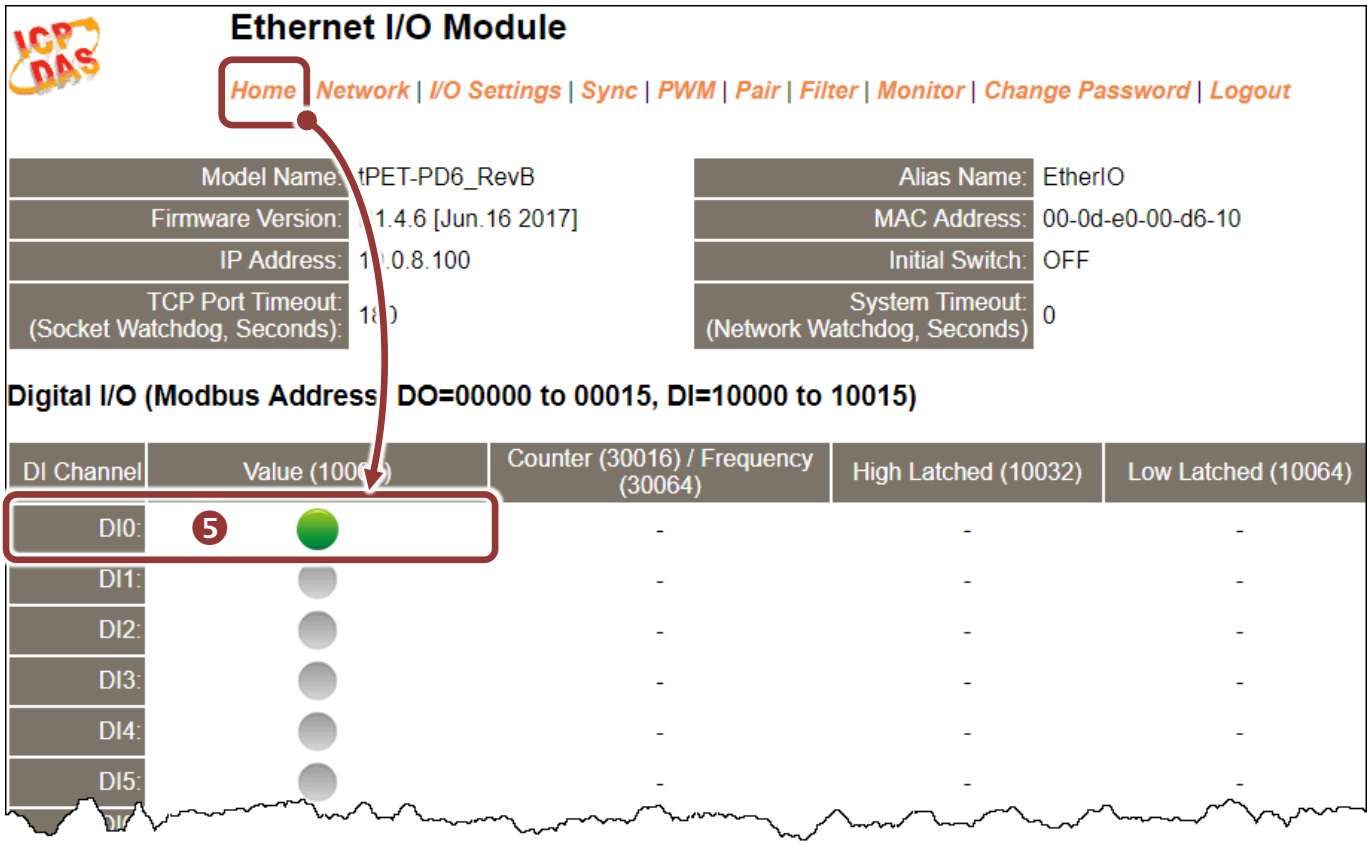

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000